

## MOUNTING INSTRUCTIONS EWO® VITAL for (cooling) circuits



### APPLICATION

EWO® VITAL optimizes the circulation water (e.g. process water, cooling circuits, pool water) and ensures that it remains in a stable equilibrium.

A continuous and permanent function is given.

### FUNCTIONALITY

EWO® VITAL works with the **3 mechanisms of the EWO method**:

- + turbulence
- + information transfer
- + magnetism

### PRE-CONDITIONS FOR INSTALLATION

Local installation regulations, general guidelines and technical data must be noted.

The installation location must be frost-proof and ensure protection against chemicals, dyes, solvents, vapors and environmental influences.

## MONTAGEHINWEISE

- horizontal or vertical mounting, **always on the pressure side**
- use neutral junctions made of brass, red brass or stainless steel for device connection
- EWO® VITAL has no certain flow direction
- keep at least 50cm distance (linear distance) to electrical equipment, e.g. pumps (distance to electrical and electromagnetic fields)
- provide calming section after mounting spot
- do not put live cables on or around water pipes
- the device must not touch damp walls or floors
- it is imperative to install the enclosed electrical bridging (earthing clamps + cables)**



example

### Note the mounting procedure:

1. mount EWO® VITAL into pipe system
2. install electrical bridging at a suitable position

**TECHNICAL DATA**

EWO® VITAL		Technical Data								
Dimension	Zoll	3/8"	1/2"	1"	5/4"	2"	2 1/2"F	3"	4"	6"
Nominal size	DN	10	15	25	32	50	65	80	100	150
Max. water pressure	bar	10								
Operating temperature	°C	1 – 90								
Flow rate Δ 0,1bar	m³/h	0,7	1,2	4,8	7,5	19	30	43	77	172
Flow rate Δ 0,2bar	m³/h	1	1,8	7,1	11	28	44	64	114	256
Total length	mm	80	100	160	200	235	324 incl. flange	330 incl. flange	370 incl. flange	550 incl. flange
Diameter	mm	35	56	80	115	133	185	200	220	285
Weight	kg	0,2	0,5	1,4	2,7	4,8	12,5	16,3	20,8	43
Boiler output	kW	n.A.	<50	>50	>100	<500	>500	>500	<1.000	>1.000
Heating system volume, approx.	m³	n.A.	2	3	4	5	8	10	20	40
Calming distance	cm	10	10	20	25	30	30	35	40	50

**OPERATION & MAINTENANCE**

EWO® VITAL is maintenance free.

**SCOPE OF DELIVERY**

- 1 EWO® VITAL with thread or flange (depending on device size)
- 1 electrical bridging (earthing clamps + cables)
- 1 installation instructions

**WARRANTY**

The latest version of the national statutory warranty provisions apply.

**Contact:**

Name: EWO Wassertechnik GmbH  
 Street: Anzing 48  
 ZIP-Code: 4113  
 City: St. Martin/Mühlkreis  
 State: Austria  
 Tel: +43 7232 2754-0  
 E-Mail: office@ewo-wasser.at

The copyright of this manual remains with the manufacturer. No part of this manual may be reproduced, processed, or distributed using electronic systems in any form without the written permission of EWO Wassertechnik GmbH. The information corresponds to the knowledge available at the time of preparation. Printing errors, mistakes and changes are reserved. Illustrations are not to scale. All information is based on the characteristics of the Austrian market  
 Edition: September 2020

